

# Timney Trigger Installation Instructions for the CZ 452

(Updated to include the newest trigger version)

**(Timney recommends installation be done by a qualified gunsmith)**



Remove the pins shown using a 3/32 punch, starting with the pin on the left first.  
**KEEP THESE PINS FOR REINSTALL OF THE TIMNEY TRIGGER.**

While removing the pin on the right, be aware that a spring and small metal ball will come out of a hole in the sear near the pin.

To prevent losing the spring and small ball, slip the action of the gun into a large zip lock bag and punch through the bag to remove the pin. This will help to catch the spring and ball.



**NOTE:**

The Timney trigger has two short pins that hold the sear within the trigger assembly. **DO NOT** remove these pins because they will slide out as the original CZ factory pins are installed.


The newest version of the Timney trigger **DOES NOT** have the two short pins that hold the sear within the trigger assembly.



In the above photo, you will notice the Timney trigger has been slipped into the slot where the factory trigger and sear used to be.

Align the trigger assembly until you can view the two short pins through the pin holes in the rifle action.


Your factory mounting pins will drive the two shorter pins out as you drive them in.

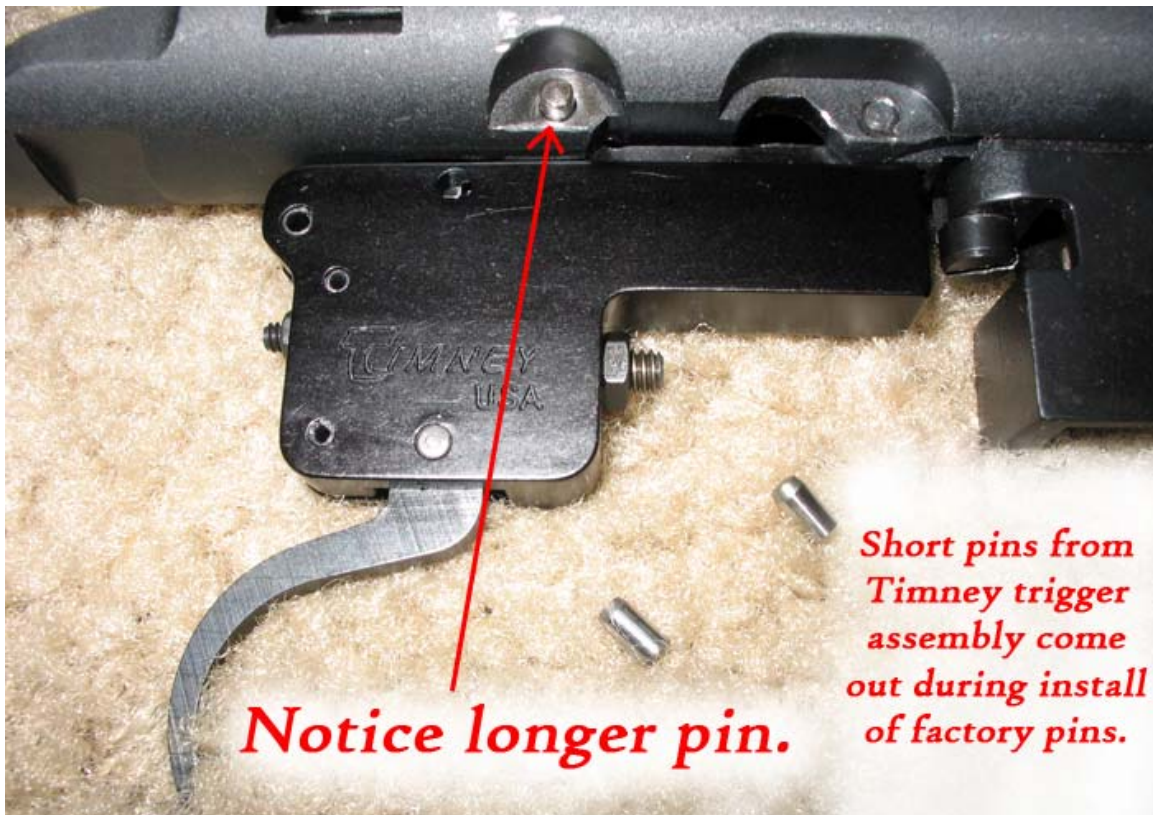

**THE LONGER FACTORY MOUNTING PIN GOES IN THE HOLE CLOSEST TO THE REAR OF THE ACTION.**

At this point, insert the factory mounting pins into the holes and tap them into place to complete the Timney trigger installation.

**Additional information on the newest version of the Timney trigger listed below.**

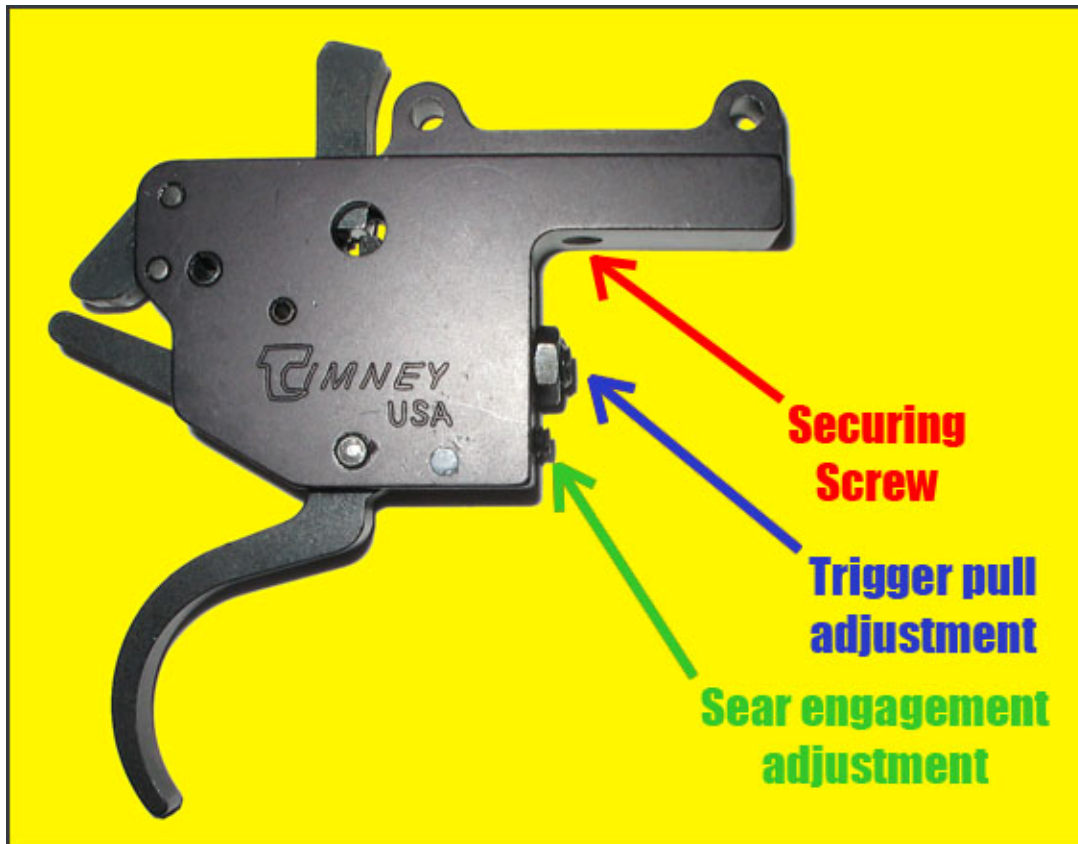

In the above photo, you will notice the newest version of the Timney trigger has a securing screw.

Be sure to tighten this screw down against the action after inserting the mounting pins mentioned above.